
 

 




 
 

 


 

 
 
 
 




 



 
 
 
 

 
 


Original	Replacement	Original	Replacement
On/Off	 Power	T.Set/Clock	 Red
Audio Out	 Mute	OK Enter	 Ok
Slow Down	 +  Shift + Play	Menu Right	 Right
F.Adv	 OPT Options	Exit	 EXIT Exit
Stop	 Stop	Menu Down	 Down
Pause	 Pause	Tracking+	 Ch +
Auto/Track	 SMART Smart	Next	 >>
Slow/Dpss-	 - Vol -	Audio	 DUAL Dual
Sp/Lp/Speed	 BACK Back	Tracking-	 - Ch -
Mon/TV	 TV/R TV/R	1	 1
Video/Go-To	 D.MENU D. Menu	Prev.	 <<
Slow/Dpss+	 + Vol +	2	 2
VCR/TV	 AV AV	3	 3
Menu	 MENU Menu	4	 4
Menu Up	 Up	5	 5
Display	 INFO Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8	 8		
9	 9		
-/--	 Guide		
Vps/Pdc	 Subt		
Next Sv+V	 Blue		
0	 0		
Progr/C/CH	 Pre Ch		
Record	 Rec		
Count Remain	 Green		
Rewind	 <<		
Audio Dub	 Yellow		
Play	 Play		
Encode	 Media		
F.Forward	 >>		
X2 Rew/Play	 List		
P.Back/R. +Play	 Sleep		
Info/Intro	 +  Shift + Info		

