
 
 
 

 








 
 

 

 
 



 

 


 




 
 




Original	Replacement	Original	Replacement
On/Off	 Power	Return	 Back
Audio Off	 Mute	OK Enter	 Ok
Slow Down	 Ch -	Progr.	 Sleep
Slow Up	 Ch +	Menu Right	 Right
Stop	 Stop	Menu Down	 Down
Subt.	 Subt	Volume+	 Vol +
Auto/Track	 +  Shift + Right	Next	 >>
Rep/A-B	 TV/R	Volume-	 Vol -
Pause	 Pause	Top Menu	 +  Shift + Menu
Title	 List	Prev.	 <<
Repeat/1/All	 Text	1	 1
Zoom	 +  Shift + Eject	2	 2
Menu	 Menu	3	 3
DVD/TV	 AV	4	 4
Menu Up	 Up	5	 5
Display	 +  Shift + Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8	 8	Karaoke/Step	 Shift + Pause
9	 9	Setup	 Options
+10	 Guide	Play/Back	 Shift + Left
0	 0	Video	 D. Menu
Mode	 Smart	Timer	 Shift + AV
Remain	 Format	Mark	 Red
C/CH	 Pre Ch	F.Forward	 >>
Np	 Shift + List	Open/Close	 Eject
Pbc	 Shift + Subt	Audio	 Dual
R/L	 Shift + Dual	Info	 Info
Record	 Rec	Angle	 Shift + Red
Rewind	 <<	3D	 3D
Play	 Play	Lang	 Shift + Green
Game	 Blue	Random	 Shift + Yellow
Resume	 Media	Shuffle	 Shift + Blue
Digest	 Yellow		
Dimmer	 Green		

