
















 



 



 












| Original | Replacement |
|--|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Sleep |  Sleep / Timer |
|  0 |  0 |
|  Recall |  Back / Return |
|  Vol+ |  Vol+ |
|  I/II |  Audio / Lang I/II |
|  PR+ |  CH+ / Page+ |

| Original | Replacement |
|--|---|
|  Vol- |  Vol- |
|  Input |  AV / Input / RDS |
|  PR- |  CH- / Page- |
|  Up |  Up |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Menu |  Menu / Home |
|  Down |  Down |
|  Exit |  Exit / Cancel / Clear |
|  Favourite |  Fav / Marker / PC |
|  FAV- |  Shift + CH- / |
|  FAV+ |  Shift + CH+ / |
|  Info |  Info / Angle |
|  P-Mode |  Picture / Format |
|  S-Mode |  Sound / Title |
|  ARC |  Display / Media |






























 










| Original | Replacement |
|--|--|
|  EPG |  Guide / EPG / -/-- |
|  Text |  Text / Goto |
|  Mix |  +  Shift + Text / |
|  Size |  Zoom / Size |
|  Reveal |  D.Menu / Top |
|  Hold |  Stop / Hold |
|  Index |  Smart / List |
|  S.Page |  Eject / Surround |
|  S.TITL |  Subtitle / EQ |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





| Original | Replacement | |
|---------------|---|---------------------------|
| Update |  +  | Shift + D.Menu / Top Menu |
| Aft/Caf |  +  | Shift + AV / Input / RDS |
| Reveal |  | Setup / OPT / |
| Off/Tim |  | Eject / Surround |
| Game Coo |  | Smart / List |
| 2.Fav P/C 2. |  | Fav / Marker / PC |
| Chan.Down |  | CH- / Page- |
| 1 |  | 1 |
| 2 |  | 2 |
| 3 |  | 3 |
| 4 |  | 4 |
| 5 |  | 5 |
| 6 |  | 6 |
| 7 |  | 7 |
| 8 |  | 8 |
| 9 |  | 9 |
| Guide -/-- 1. |  | Guide / EPG / -/-- |

| Original | Replacement | |
|--------------|---|-----------------------------|
| 0/10 |  | 0 |
| Menu audio |  | Audio / Lang I/II |
| Red |  | Red / Netflix / Search |
| Green |  | Green / APP / Repeat |
| Yellow |  | Yellow / YouTube / Repeat |
| Blue |  | Blue / Prime Video / Random |
| Color+ P.Std |  | Picture / Format |
| Color- S.Std |  | Sound / Title |
| Audio+ |  +  | Shift + Vol+ |
| Tune- |  | << / Tune- |
| Tune+ |  | >> / Tune+ |
| Menu |  | Menu / Home |
| Mute |  | Mute / Dimmer |
| Info |  | Info / Angle |
| Subt.List |  | Subtitle / EQ |
| Txt Stop |  | Stop / Hold |
| Sleep Timer |  | Sleep / Timer |





| Original | Replacement | Original | Replacement |
|------------|-----------------------|----------|-------------|
| Return TV | TV/Radio / | | |
| Menu video | D.Menu / Top | | |
| Text | Text / Goto | | |
| Txt Expand | Zoom / Size | | |
| TV/AV | AV / Input / RDS | | |
| On/Off | Power | | |
| Menu Up | Up | | |
| Display | Display / Media | | |
| Menu Left | Left | | |
| OK Enter | OK | | |
| Menu Right | Right | | |
| Menu Off | Exit / Cancel / Clear | | |
| Menu Down | Down | | |
| Back | Back / Return | | |
| Volume+ | Vol+ | | |
| Chan.Up | CH+ / Page+ | | |
| Volume- | Vol- | | |

