



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	TV / R		TV/Radio /
	Menu		Menu / Home
	Sortie		Exit / Cancel / Clear
	Up		Up

Original	Replacement	Original	Replacement
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Vol +		Vol+
	Info		Info / Angle
	CH +		CH+ / Page+
	Vol -		Vol-
	Audio		Audio / Lang I/II
	CH -		CH- / Page-
	Red / RCL		Red / Netflix / Search
	Green / Pause		Shift + Green / APP /
	Green / Pause		Green / APP / Repeat
	Yellow / Sous		Yellow / YouTube / Repeat
	Yellow / Sous		Shift + Yellow / YouTube /
	Blue / Text		Shift + Blue / Prime
	Blue / Text		Blue / Prime Video / Random





	Original	Replacement	
	FAV	Fav / Marker / PC	
	SAT	+ Shift + 0	
	V.F	Setup / OPT /	
	Pause	Pause / Step / Freeze	
	<	+ Shift + << /	
	>	+ Shift + >> /	
	Rec	Rec / Rec Mode	
	Play	Play / Slow	
	<<	<< / Tune-	
	>>	>> / Tune+	
	Stop	Stop / Hold	

	Original	Replacement	

