



















 

 





 









Original	Replacement
 Power	 Power
 Tv/Radio	 TV/Radio /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Subtitle	 Subtitle / EQ
 Text	 Text / Goto
 Hold	 Shift + Stop /
 TVG	 Guide / EPG / -/--
 Audio	 Audio / Lang I/II
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Size	 Zoom / Size
 <<	 << / Tune-
 Subpage	 Eject / Surround
 >>	 >> / Tune+

Original	Replacement
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 FAV	 Fav / Marker / PC
 >>I/Index	 >>I / Preset+
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Aspect	 Picture / Format
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+





Original	Replacement	Original	Replacement
	Vol-		Vol-
	Info		Display / Media
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--	 + 	Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return

Original	Replacement	Original	Replacement

