


 





 

 

 

 
 


 
 


 










 
 

 
 
 

 

 

 





 
 


 




 



 
 
 





Original	Replacement	Original	Replacement
 Power	 Power	 P.Mode	 Shift + Format
 Mute	 Mute	 Recall	 Back
 1	 1	 Menu	 Menu
 2	 2	 Display	 Info
 3	 3	 Media	 Media
 4	 4	 Exit	 Exit
 5	 5	 Rec	 Rec
 6	 6	 CH -	 Ch -
 7	 7	 Vol +	 Vol +
 8	 8	 Vol -	 Vol -
 9	 9	 Guide	 Guide
 0	 0	 CH +	 Ch +
 -/--	 Shift + Guide	 Fav +	 Pre Ch
 Nicam	 Options	 Up	 Up
 Source	 AV	 TV / Radio	 TV/R
 S.Mode	 Shift + Dual	 Fav -	 Shift + Pre Ch
 Sleep	 Sleep	 Down	 Down





Original	Replacement	Original	Replacement
 Right	 Right	 Cyan	 Blue
 Left	 Left		
 Enter	 Ok		
 Play/Pause / Hold	 Play		
 Play/Pause / Hold	 Pause		
 Aspect	 Format		
 << / Size	 <<		
 >> / Reveal	 >>		
 Stop / Index	 Stop		
 Lang	 Dual		
 I<< / Subpage	 I<<		
 >>I / Auto	 >>I		
 Subtitle	 Subt		
 Text	 Text		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		

