







 





 

 

 



Original	Replacement
	Power
	Mute / Dimmer
	Picture / Format
	Sleep / Timer
	Fav / Marker / PC
	TV/Radio /
	Smart / List
	Shift + 0
	Zoom / Size
	Subtitle / EQ
	Vol+
	Info / Angle
	CH+ / Page+
	Vol-
	Back / Return
	CH- / Page-
	Menu / Home

Original	Replacement
	Text / Goto
	Guide / EPG / -/-
	Exit / Cancel / Clear
	Up
	Shift + CH- /
	Left
	OK
	Right
	Shift + CH+ /
	Down
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	1
	2
	3





	Original	Replacement
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	Speaker	 Sound / Title
	0	 0
	✓	 Display / Media

Original	Replacement

