






 

 



 







 




 


 
 


 
 


 



 



 









 
 
 

 
 


 



 




Original		Replacement		Original		Replacement	
	Power		Power		Stop		Stop
	Open/Close		Eject		Play		Play
	1		1		I<<		I<<
	2		2		>>I		>>I
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		Ok
	8		8		Menu DVD		Menu
	9		9		Setup		Options
	0		0		Vol+		Vol +
	10+		Guide		Vol-		Vol -
	Video Out		AV		Mute		Mute
	<<		<<		Language		Dual
	>>		>>		Angle		TV/R
	Pause		Pause		Subtitle		Subt





Original	Replacement	Original	Replacement
Progressive Scan	Format		
Repeat	Text		
Random	3D		
Zoom	Shift + Eject		
OSD	Pre Ch		
A-B	List		
PBC	Back		
L/R	Info		
Program	Sleep		
Sub-Menu	D. Menu		

