



| Original | Replacement |
|--|---|
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Mute |  Mute / Dimmer |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  Recall |  Back / Return |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Menu |  Menu / Home |
|  Up/CH+ |  Up |
|  Exit |  Exit / Cancel / Clear |
|  Left |  Left |

| Original | Replacement |
|--|---|
|  Vol- |  Vol- |
|  OK |  OK |
|  Right |  Right |
|  Vol+ |  Vol+ |
|  Pg Up |  CH+ / Page+ |
|  Down/CH- |  Down |
|  Pg Dn |  CH- / Page- |
|  TV/Radio |  TV/Radio / |
|  Info |  Info / Angle |
|  FAV |  Fav / Marker / PC |
|  Audio |  Audio / Lang I/II |
|  Sub-T |  Subtitle / EQ |
|  TTX |  Text / Goto |
|  Timer |  Guide / EPG / -/- |
|  List |  Smart / List |
|  Pause |  Pause / Step / Freeze |
|  Sleep |  Sleep / Timer |





| Original | Replacement |
|----------|-----------------------------|
| RATIO | Picture / Format |
| Red | Red / Netflix / Search |
| Green | Green / APP / Repeat |
| Yellow | Yellow / YouTube / Repeat |
| Blue | Blue / Prime Video / Random |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

