








 

 







 




 

 



 




Original	Replacement
 Power	 Power
 TV / AV	 AV / Input / RDS
 TV/TXT	 Text / Goto
 Cancel	 Shift + Exit / Cancel / Clear
 Reveal	 Display / Media
 DTV	 D.Menu / Top
 Hold	 Stop / Hold
 Size	 Shift + Zoom /
 Subpage	 Eject / Surround
 Index	 Smart / List
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 CH+	 CH+ / Page+
 Menu	 Menu / Home
 Vol+	 Vol+

Original	Replacement
 CH-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Vol-	 Vol-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Original		Replacement	
	.	PROGRAM TV/RADIO	TV/Radio /
	0	HDMI - BAT	0
	Recall	RETURN BACK	Back / Return
	Picture	FORMAT PICTURE	Picture / Format
	Sound	TITLE SOUND	Sound / Title
	I/II	LANG I/II AUDIO	Audio / Lang I/II
	Mute	DIMMER MUTE	Mute / Dimmer
	Sleep	TIMER SLEEP	Sleep / Timer
	Info	ANGLE INFO	Info / Angle
	Zoom	SIZE ZOOM	Zoom / Size
	Freeze	STEP - FREEZE II	Pause / Step / Freeze
	EPG	-/-- GUIDE EPG	Guide / EPG / -/--
	FAV List	PC FAV MARKER	Fav / Marker / PC
	FAV ADD	PRESET- I<<	I<< / Preset-
	FAV >>I	PRESET+ >>I	>>I / Preset+
	Subtitle	EQ SUBTITLE	Subtitle / EQ
	Time	SHIFT +  TIMER SLEEP	Shift + Sleep / Timer

Original		Replacement	
	Quick Start	OPT-TOOLS SETUP	Setup / OPT /

