

 





 

 


 
 
 


 




 

 


 

 




 



 

 










Original	Replacement
 Standby	 Power
 Open/Close	 Eject
 Key Lock	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Digest	 Smart
 DVD Menu	 D. Menu
 Audio Mode	 Dual

Original	Replacement
 Zoom	 Shift + Eject
 Title Menu	 Menu
 Subtitle Menu	 Subt
 Audio Menu	 Media
 PBC	 Yellow
 3D	 3D
 Angle	 TV/R
 Display	 Info
 Setup	 Options
 Return	 Back
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Bookmark	 Format
 Search	 Shift + TV/R





	Original	Replacement		Original	Replacement
	Program	 Sleep			
	Slow/F	 Guide			
	Slow/R	 Pre Ch			
	Play	 Play			
	Stop	 Stop			
	>>I	 >>I			
	I<<	 I<<			
	>>	 >>			
	<<	 <<			
	Pause/Step	 Pause			
	Random	 Blue			
	Mute	 Mute			
	Repeat	 Text			
	A-B	 List			

