 





 



 









 





 











Original	Replacement
 P100	 Display / Media
 Power	 Power
 REV	 << / Tune-
 Doub	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 Hold	 Stop / Hold
 4	 4
 5	 5
 6	 6
 Sub	 Subtitle / EQ
 Update	 D.Menu / Top
 7	 7
 8	 8
 9	 9
 Mix	 Text / Goto

Original	Replacement
 AV	 AV / Input / RDS
 0	 0
 -/--	 Guide / EPG / -/--
 P+	 CH+ / Page+
 Up	 Up
 Mute	 Mute / Dimmer
 TV/TXT	 TV/Radio /
 Menu	 Menu / Home
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Swap	 Back / Return
 P-	 CH- / Page-
 Down	 Down
 16:9	 Picture / Format





Original	Replacement	Original	Replacement
	Red  Red / Netflix / Search 		
	Green  Green / APP / Repeat 		
	Yellow  Yellow / YouTube / Repeat 		
	Blue  Blue / Prime Video / Random 		
	Violet  Smart / List		
	[ ]  Setup / OPT /		
	♪  Sound / Title		
	PP  +  Shift + Smart / List		

