



 

 

 

 

 
 


 



 
 
 

 



 







 
 



 

 
 


 
 
 
 
 

 

 
 

 



 





 
 


 

 
 


 


 

 
 
 









| Original | Replacement | Original | Replacement |
|---|---|---|--|
|  Power On |  Power |  Memory |  Blue |
|  Power Off |  Shift + Power |  Search |  TV/R |
|  1/BD |  1 |  Input Mode |  AV |
|  2/(SAT/CBL) |  2 |  CH+ |  Ch + |
|  3/(DOCK) |  3 |  CH- |  Ch - |
|  Status |  4 |  Sleep |  Sleep |
|  BD |  5 |  Audio Delay |  Smart |
|  Tuner |  6 |  Mute |  Mute |
|  DVD |  7 |  Vol+ |  Vol + |
|  DOCK |  8 |  Vol- |  Vol - |
|  TV |  9 |  Menu |  Menu |
|  Game |  Guide |  Return |  Back |
|  SAT/CBL |  0 |  CH Level |  Dual |
|  V.AUX |  Pre Ch |  Surround |  3D |
|  Band |  Red |  Up |  Up |
|  Mode |  Green |  Down |  Down |
|  Shift |  Yellow |  Left |  Left |





| Original | Replacement | Original | Replacement |
|---|-------------|---|---------------|
|  | Right |  | Right |
|  | Enter |  | Ok |
|  | Night |  | Eject |
|  | Restorer |  | D. Menu |
|  | Tone |  | Info |
|  | Test |  | Options |
|  | Dimmer |  | List |
|  | < Surround |  | Shift + Left |
|  | > Surround |  | Shift + Right |
|  | up Tuning |  | Shift + Up |
|  | Down Tuning |  | Shift + Down |
|  | Play Ipod |  | Play |
|  | Pause Ipod |  | Pause |
|  | Stop Ipod |  | Stop |
|  | << Ipod |  | << |
|  | >> Ipod |  | >> |
|  | Repeat Ipod |  | Text |
| | |  | Random Ipod |
| | |  | I<< Ipod |
| | |  | I>> Ipod |
| | |  | Format |
| | |  | I<<< |
| | |  | I>>> |

