



Original	Replacement
 Power	 Power
 Clock	 Shift + Sleep / Timer
 Sleep	 Sleep / Timer
 CD	 Shift + 3
 Analog In	 D.Menu / Top
 Optical In	 Setup / OPT /
 FM	 Smart / List
 AM	 Display / Media
 Bluetooth	 Shift + 9
 I<<	 I<< / Preset-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 <</Tune-	 << / Tune-
 Stop	 Stop / Hold
 >>/Tune+	 >> / Tune+
 Preset+	 Shift + >>I / Preset+

Original	Replacement
 Tone	 AV / Input / RDS
 Volume+	 Vol+
 Preset-	 Shift + I<< / Preset-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Dimmer	 Shift + Mute / Dimmer
 Info	 Info / Angle
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Timer Menu	 Menu / Home
 Shuffle	 Blue / Prime Video / Random
 Repeat	 Green / APP / Repeat
 Program	 TV/Radio /



