
 
 

 

 

 

 


 
 
 
 

 



 




Original	Replacement	Original	Replacement
 Power	 Power	 CALL Favorites	 Pre Ch
 Sleep	 Sleep	 Tone	 Smart
 Internet Radio	 Shift + 1	 Vol+	 Vol +
 Online Music	 Shift + 2	 Vol-	 Vol -
 Music Server	 Shift + 3	 Mute	 Mute
 Optical	 Shift + 4	 Top Menu	 Menu
 Coaxial	 Shift + 5	 Info	 Info
 Analog	 Shift + 6	 Search	 TV/R
 Bluetooth	 Shift + 7	 Setup	 Options
 iPod/USB	 Shift + 8	 Up	 Up
 I<<	 I<<	 Down	 Down
 Play	 Play	 Right	 Right
 Pause	 Pause	 Left	 Left
 >>I	 >>I	 Enter	 Ok
 CH+	 Ch +	 1	 1
 CH-	 Ch -	 2	 2
 ADD Favorites	 3D	 3	 3





Original		Replacement		Original		Replacement	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	+10		Guide				
	Clear		Exit				
	Random		Media				
	Repeat		Text				
	Mode		Format				
	Dimmer		Subt				

