 

 


 

 
 

 
 
 

 
 
 
 
 
 
 
 
 
 


 
 


 
 
 
 




Original	Replacement
 Power	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 Search	 TV/R
 Prog/Direct	 Sleep
 Clear	 Exit
 Call	 Pre Ch

Original	Replacement
 Dimmer	 Shift + Info
 YouTube	 Media
 Netflix	 Shift + Smart
 Vidu	 Shift + Media
 Info	 Info
 Home	 Smart
 Power AMP	 Shift + Power
 Source Up	 Ch +
 Source Down	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Top Menu	 Menu
 Pop Up Menu	 D. Menu
 Return	 Back
 Setup	 Shift + Options
 Up	 Up





Original	Replacement	Original	Replacement
 Down	 Down	 Audio	 Dual
 Right	 Right	 Option	 Options
 Left	 Left	 Red	 Red
 Enter	 Ok	 Green	 Green
 <<	 <<	 Yellow	 Yellow
 Play	 Play	 Blue	 Blue
 >>	 >>	 Video Resolution	 3D
 I<<	 I<<	 DVD a Page	 Shift + AV
 Pause	 Pause	 Disc Layer	 Shift + Format
 Stop	 Stop	 Picture Adjust	 Shift + 3D
 >>I	 >>I		
 Repeat	 Text		
 A-B	 Shift + Back		
 Random	 AV		
 Pure	 Format		
 Subtitle	 Subt		
 Angle	 List		

