

 





 
















 

 









Original	Replacement
 Sleep	 Sleep / Timer
 Clock	 Shift + Sleep / Timer
 Dimmer	 Shift + Mute / Dimmer
 Power	 Power
 Internet Radio	 TV/Radio /
 AUX	 Shift + 7
 Music Server	 Sound / Title
 Bluetooth	 Shift + 9
 iPod/USB	 Shift + 8
 I<</CH-	 I<< / Preset-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>/CH+	 >>I / Preset+
 ADD Favorites	 CH+ / Page+
 SDB Tone	 Audio / Lang I/II
 Volume+	 Vol+
 Call Favorites	 CH- / Page-

Original	Replacement
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Top Menu	 D.Menu / Top
 Info	 Info / Angle
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Search	 Red / Netflix / Search
 Down	 Down
 Setup	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original	Replacement	Original	Replacement
 7	 7		
 8	 8		
 9	 9		
 +10	 Guide / EPG / -/--		
 0	 0		
 Clear	 Exit / Cancel / Clear		
 Random	 Blue / Prime Video / Random		
 Repeat	 Green / APP / Repeat		
 Mode	 Picture / Format		

Original	Replacement

