



Original	Replacement	Original	Replacement
	Power		Netflix
	Mute		Shift + Red / Netflix /
	Mute / Dimmer		Menu / Home
	1		Menu
	2		Up
	3		Source
	4		AV / Input / RDS
	5		Left
	6		OK
	7		Right
	8		Return
	9		Shift + Back / Return
	CH.List		Down
	0		Exit
	Recall		Vol+
	YouTube		Info
	Toon Goggles		Info / Angle
	Foxxum		CH+ / Page+
			Vol-
			EPG
			CH- / Page-
			I<< / TTX
			I<< / Preset-





Original	Replacement
I<< / TTX	Text / Goto
Play/Pause / Timeshift	Pause / Step / Freeze
Play/Pause / Timeshift	Play / Slow
Play/Pause / Timeshift	Sleep / Timer
>>I / Hold	>>I / Preset+
>>I / Hold	Shift + Stop /
<< / Cancel	<< / Tune-
<< / Cancel	Shift + Exit / Cancel / Clear
Stop / Fav	Stop / Hold
Stop / Fav	Fav / Marker / PC
>> / Reveal	>> / Tune+
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Record	Rec / Rec Mode
Size	Zoom / Size

Original	Replacement
Subpage	Eject / Surround
I/II Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Index	Display / Media

