



 




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 *(Left)	 Shift + Left
 0	 0
 *(Right)	 Shift + Right
 []/Picture	 Picture / Format
 /Sound	 Sound / Title
 I-II	 Audio / Lang I/II

Original	Replacement
 Menu	 Menu / Home
 Up/PR+	 Up
 PR+	 CH+ / Page+
 List	 Smart / List
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Sleep	 Sleep / Timer
 Down/PR-	 Down
 PR-	 CH- / Page-
 P<P	 Back / Return
 Tv/AV	 AV / Input / RDS
 Tv/PC	 TV/Radio /
 [<>]/ARC	 Shift + Picture / Format
 Red	 Red / Netflix / Search





Original

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[≡]/Text		Text / Goto
	[.≡]/Mix		Shift + Text / Text /
	[≡◆]/Size		Zoom / Size
	[≡i]/Index		Info / Angle
	[≡x]/Update		Rec / Rec Mode
	[≡o]/Time		Pause / Step / Freeze
	[≡?]/Reveal		Play / Slow
	[≡+]/Hold		Stop / Hold
	[■]/PIP		Display / Media
	[:■]/Input		Shift + AV / Input / RDS / RDS
	[/■]/Swap		Shift + Back / Return / Return
	PIP PR+		Shift + CH+ / CH+ /
	[-■]/Position		Shift + Display / Media / Media
	[.≡]/Mode		Shift + Smart / List / List

Original

	* (Down)		Shift + Down / Down
	PIP PR-		Shift + CH- / CH- /

Replacement

