



Original		Replacement		Original		Replacement	
	Power		Power		0		0
	Up		Up		-/--		Guide
	Down		Down		PP		Back
	Right		Right		P/CH+		Ch +
	Left		Left		P/CH-		Ch -
	OK		Ok		P<P		Pre Ch
	M		Menu		Vol+		Vol +
	[i]		Info		Vol-		Vol -
	1		1		Mute		Mute
	2		2		I-II		Dual
	3		3		TV		TV/R
	4		4		AV		AV
	5		5		Red/Sound		Red
	6		6		Green/Picture		Green
	7		7		Yellow/Feature		Yellow
	8		8		Blue/Install		Blue
	9		9		[≡]		Text





Original		Replacement		Original		Replacement	
	[≡o]	HOME SMART	Smart				
	[≡+]	PICTURE FORMAT	Format				
	[≡x]/[· ·]	ECO 3D	3D				
	[ /≡]/[ *]	AD SUBT	Subt				
	[≡◆]/[+]	SETTINGS OPT	Options				
	[≡?]/PC	APP MEDIA	Media				
	[≡i]	DISC NAV LIST	List				

