



Original		Replacement		Original		Replacement	
	Power		Power		V-		Vol-
	Input		AV / Input / RDS		Home		Menu / Home
	1		1		P-		CH- / Page-
	2		2		[G]		Guide / EPG / -/--
	3		3		i		Info / Angle
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Back		Back / Return
	9		9		Down		Down
	Lang		Audio / Lang I/II		Exit		Exit / Cancel / Clear
	0		0		Netflix		Shift + Red / Netflix /
	TXT		Text / Goto		YouTube		Shift + Yellow / YouTube /
	V+		Vol+		prime video		Shift + Blue / Prime
	Mute		Mute / Dimmer		Rakuten Tv		TV/Radio /
	P+		CH+ / Page+		twitch		Shift + Green / APP / Repeat





Original	Replacement	Original	Replacement
	*1		Setup / OPT /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

Original	Replacement	Original	Replacement

