



| Original  |              | Replacement   |                 | Original  |             | Replacement   |                           |
|---|--------------|---|-----------------|---|-------------|---|---------------------------|
|    | Standby      |    | Power           |    | CH+         |    | CH+ / Page+               |
|    | Mute         |    | Mute / Dimmer   |    | Vol-        |    | Vol-                      |
|    | 1            |    | 1               |    | Zoom/Aspect |    | Shift + Zoom /            |
|    | 2            |    | 2               |    | Zoom/Aspect |    | Picture / Format          |
|    | 3            |    | 3               |    | CH-         |    | CH- / Page-               |
|    | 4            |    | 4               |    | Menu        |    | Menu / Home               |
|    | 5            |    | 5               |    | Up          |    | Up                        |
|    | 6            |    | 6               |    | Exit        |    | Exit / Cancel / Clear     |
|    | 7            |    | 7               |    | Left        |    | Left                      |
|   | 8            |   | 8               |   | OK/Enter    |   | OK                        |
|  | 9            |  | 9               |  | Right       |  | Right                     |
|  | Recall       |  | Back / Return   |  | Sleep       |  | Sleep / Timer             |
|  | 0            |  | 0               |  | Down        |  | Down                      |
|  | List         |  | Smart / List    |  | Source      |  | AV / Input / RDS          |
|  | Vol+         |  | Vol+            |  | Red         |  | Red / Netflix / Search    |
|  | Info/Display |  | Display / Media |  | Green       |  | Green / APP / Repeat      |
|  | Info/Display |  | Info / Angle    |  | Yellow      |  | Yellow / YouTube / Repeat |





| Original | Replacement                 |
|----------|-----------------------------|
|          | Blue / Prime Video / Random |
|          | Text / Goto                 |
|          | D.Menu / Top                |
|          | Shift + Stop /              |
|          | Audio / Lang I/II           |
|          | Rec / Rec Mode              |
|          | Shift + Green / APP /       |
|          | Stop / Hold                 |
|          | Play / Slow                 |
|          | Pause / Step / Freeze       |
|          | Zoom / Size                 |
|          | Subtitle / EQ               |
|          | << / Tune-                  |
|          | >> / Tune+                  |
|          | TV/Radio /                  |
|          | I<< / Preset-               |
|          | Guide / EPG / -/--          |

| Original | Replacement       |
|----------|-------------------|
|          | >>I / Preset+     |
|          | Fav / Marker / PC |

