
















































Original	Replacement	Original	Replacement
 Power	 Power	 Yellow	 Yellow / YouTube / Repeat
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 Picture	 Picture / Format	 0	 0
 Sound	 Sound / Title	 Exit	 Exit / Cancel / Clear
 Still	 Pause / Step / Freeze	 Blue	 Blue / Prime Video / Random
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 Red	 Red / Netflix / Search	 Down	 Down
 4	 4	 CH -	 CH- / Page-
 5	 5	 CH +	 CH+ / Page+
 6	 6	 Vol -	 Vol-
 Green	 Green / APP / Repeat	 Vol +	 Vol+
 7	 7	 Guide / Size	 Guide / EPG / -/--
 8	 8	 Index / Subtitle	 Subtitle / EQ
 9	 9	 Sleep	 Sleep / Timer

Original	Replacement	Original	Replacement
 Power	 DIMMER MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP - FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG VII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	
 HOME	 ANGLE		
 MENU	 INFO		
 CLEAR	 OK	 RETURN	
 EXIT	 BACK		
 CANCEL	 LIST	 CH PAGE +	
 VOL+	 SMART	 CH PAGE -	
 VOL-	 MEDIA		
 TV	 DISPLAY		
 DVD	 1	 2	 3
 CD - STB	 VIDEO	 TAPE	 TUNER
	 4	 5	 6
	AUX - HDD	USB	BLUETOOTH
	7	8	9
	GUIDE EPG	HDMI - BAT	PC
	NETFLIX	APP	YouTube
	SEARCH	REPEAT	REPEAT A-B
		RANDOM	





Original	Replacement
Text	Text / Goto
FAV / Sub Code	Fav / Marker / PC
TV / Reveal	TV/Radio /
Comp / Mix	Display / Media
Language	Audio / Lang I/II
Cancel	+ Shift + Exit / Cancel / Clear
Info	Info / Angle
Recall	Back / Return
Zoom	Zoom / Size
I / II	+ Shift + Audio / Lang I/II

Original	Replacement

