



























 


 

 
 










 

 


 



 


Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Guide	 Guide / EPG / -/--
 0	 0
 Recall	 Fav / Marker / PC
 Google Play	 Display / Media
 YouTube	 Shift + Yellow / YouTube /
 Netflix	 Shift + Red / Netflix / Search

Original	Replacement
 prime video	 Shift + Blue / Prime
 Home	 Shift + Menu /
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Smart/Colours	 Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-
 [i+]	 Info / Angle
 *	 Setup / OPT /





Original	Replacement
 Mute	 Mute / Dimmer
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold
 Text	 Text / Goto
 Aspect	 Picture / Format
 Subtitles	 Subtitle / EQ
 Lang	 Audio / Lang I/II
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Replacement

