

 
 
 
 
 

 
 
 
 




 

 
 
 



 
 


 

 
 

 


 



 





 

 
 

 
 

 

 

 

 

 









Original	Replacement	Original	Replacement
 Power	 Power	 Color Mode	 Options
 Source Search	 TV/R	 9	 9
 Video	 Green	 0	 0
 USB	 Yellow	 Menu	 Menu
 Lan	 Blue	 ESC	 Exit
 Computer	 Red	 User	 Back
 1	 1	 Pointer	 Info
 1	 Guide	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 Enter	 Ok
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Page Up	 Ch +
 Auto	 List	 Page Down	 Ch -
 7	 7	 E-Zoom+	 Shift + Ch +
 Aspect	 Format	 E-Zoom-	 Shift + Ch -
 8	 8	 Vol+	 Vol +





Original		Replacement		Original	Replacement
	Vol-		Vol -		
	A/V Mute		Mute		
	Freeze		Pause		
	Help		D. Menu		

