


| Original | Replacement |
|---|---|
|  Power |  Power |
|  Source Search |  Source |
|  Computer |  Comp / Video |
|  HDMI/Video |  Shift + Comp / Video |
|  Lan |  Volt / Focus |
|  USB |  3D / Invert |
|  Menu |  Menu |
|  Auto |  Auto |
|  Aspect |  Eco / Aspect |
|  A/V Mute |  Blank / Mute |
|  User |  Shift + Up |
|  Color Mode |  Mode |
|  Pen Mode |  Shift + Source |
|  Link Menu |  Shift + Menu |
|  Pointer |  Shift + Down |
|  Freeze |  Freeze / Timer |
|  Esc |  Shift + Mode |

| Original | Replacement |
|---|--|
|  Home |  Shift + Power |
|  Split |  Help / Info |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Enter |  Enter |
|  Vol+ |  Vol + / Page + |
|  Vol- |  Vol - / Page - |
|  E-Zoom+ |  + / Play |
|  E-Zoom- |  - / Stop |
|  Page Up |  Shift + Vol + / Page + |
|  Page Down |  Shift + Vol - / Page - |
|  1 |  Shift + Freeze / Timer |
|  2 |  Shift + + / Play |
|  3 |  Shift + Volt / Focus |
|  4 |  Shift + - / Stop |

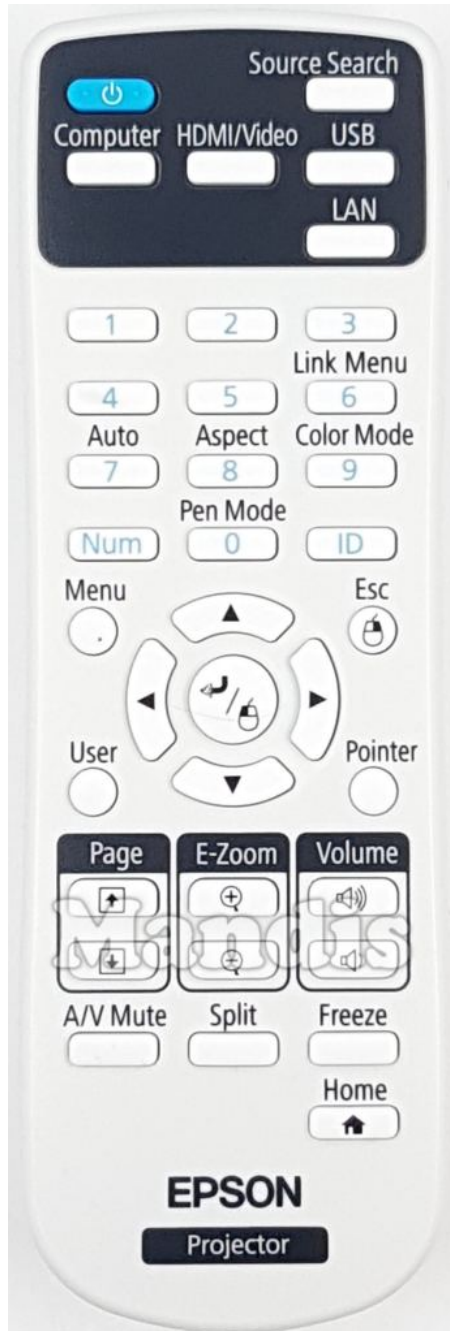



| Original | | Replacement | | Original | Replacement |
|----------|----|---------------------|----------------------|----------|-------------|
| 5 | 5 | Shift + Info Help | Shift + Help / | | |
| 6 | 6 | Shift + Aspect Eco | Shift + Eco / Aspect | | |
| 7 | 7 | Shift + Invert 3D | Shift + 3D / | | |
| 8 | 8 | Shift + Mute Blank | Shift + Blank / Mute | | |
| 9 | 9 | Shift + Right Arrow | Shift + Right | | |
| 0 | 0 | Shift + Auto | Shift + Auto | | |
| ID | ID | Shift + Left Arrow | Shift + Left | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

