


















 






 



 



















Original	Replacement	Original	Replacement
	Power		Power
	FAV		Pre Ch
	TV / RAD		TV/R
	SUB		Subt
	Mute		Mute
	Up / Channel +		Up
	Up / Channel +		Ch +
	Down / Channel -		Down
	Down / Channel -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	OK		Ok
	Text		Text
	List		Media
	Back		Back
	Menu		Menu
	i		Info
	EPG		Guide
	Page +		>>
	Page -		<<
	AV		AV
	Audio		Dual
	Pause		Pause
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5





Original		Replacement		Original		Replacement	
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				

