






 


 
 






 



 







Original		Replacement		Original		Replacement	
	Standby		Power		CH+		CH+ / Page+
	Mute		Mute / Dimmer		Vol-		Vol-
	1		1		Zoom/Aspect		Shift + Zoom /
	2		2		Zoom/Aspect		Picture / Format
	3		3		CH-		CH- / Page-
	4		4		Menu		Menu / Home
	5		5		Up		Up
	6		6		Exit		Exit / Cancel / Clear
	7		7		Left		Left
	8		8		OK/Enter		OK
	9		9		Right		Right
	Recall		Back / Return		Sleep		Sleep / Timer
	0		0		Down		Down
	List		Smart / List		Source		AV / Input / RDS
	Vol+		Vol+		Red		Red / Netflix / Search
	Info/Display		Display / Media		Green		Green / APP / Repeat
	Info/Display		Info / Angle		Yellow		Yellow / YouTube / Repeat





Original	Replacement	Original	Replacement
 Blue	 Blue / Prime Video / Random	 >>	 >>  / Preset+
 TTX	 Text / Goto	 FAV	 Fav / Marker / PC
 Index	 D.Menu / Top		
 Hold	 Shift + Stop /		
 I/II/Audio	 Audio / Lang I/II		
 Repeat/Rec	 Rec / Rec Mode		
 Repeat/Rec	 Shift + Green / APP /		
 Stop/Reveal	 Stop / Hold		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Size	 Zoom / Size		
 Subtitle	 Subtitle / EQ		
 <</Subpage	 << / Tune-		
 >>	 >> / Tune+		
 Tv/Radio	 TV/Radio /		
 I<<	 I<< / Preset-		
 EPG	 Guide / EPG / -/--		

