





 

 





















Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Nicam/A2	 Audio / Lang I/II
 Aspect	 Shift + Picture / Format
 PMode	 Picture / Format
 SMode	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--
 0	 0

Original	Replacement
 Recall	 Back / Return
 Display	 Display / Media
 Freeze	 Shift + Pause / Step /
 Auto/Goto	 Shift + Text /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear





Original	Replacement
 CH+ / Page+	 CH+ / Page+
 Media	 Shift + Display / Media
 Vol+	 Vol+
 CH- / Page-	 CH- / Page-
 Text	 Text / Goto
 Vol-	 Vol-
 Hold	 Shift + Stop /
 Reveal	 Setup / OPT /
 Size	 Zoom / Size
 Index	 Smart / List
 S.Title	 Subtitle / EQ
 S.Page	 Eject / Surround
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 FAV	 Fav / Marker / PC
 <<	 << / Tune-
 >>	 >> / Tune+

Original	Replacement
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

