 


 









 



 



 








 













 



 

 

 





 



 







 




Original	Replacement	Original	Replacement
 Power	 Power	 Exit	 Exit
 Mute	 Mute	 CH+	 Ch +
 1	 1	 CH-	 Ch -
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 Pause	 Pause
 0	 0	 Text	 Text
 Audio	 Dual	 Multivideo	 Smart
 Tv/Radio	 TV/R	 <</FAV Up	 <<
 Recall	 Back	 >>/FAV Down	 >>
 FAV	 Pre Ch	 Tv/VCR	 Media
 Menu	 Menu	 Subtitle	 Subt





Original	Replacement	Original	Replacement
 INFO	 INFO		
 EPG	 GUIDE		

