



 





 

 







 

 

 


 



 



 











 


 




 








 






Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV/Source	 AV / Input / RDS
 0	 0
 Exit/--	 SHIFT +  Shift + Guide / EPG / --
 Exit/--	 Exit / Cancel / Clear
 P<P/SWAP	 PC FAV MARKER Fav / Marker / PC
 Info	 ANGLE INFO Info / Angle
 PP	 RETURN BACK Back / Return

Original	Replacement
 I/II	 AUDIO Audio / Lang I/II
 Ok/Select	 OK
 Up	 Up
 Left	 Left
 Right	 Right
 Down	 Down
 Menu	 HOME MENU Menu / Home
 TV/DTV	 PROGRAM TV / RADIO TV/Radio /
 CH+ / Page+	 + CH PAGE CH+ / Page+
 Vol+	 + VOL Vol+
 CH- / Page-	 - CH PAGE CH- / Page-
 Mute	 DIMMER MUTE Mute / Dimmer
 Vol-	 - VOL Vol-
 Red/↑	 SHIFT +  Shift + CH+ /
 Red/↑	 NETFLIX SEARCH Red / Netflix / Search
 Green/↓	 SHIFT +  Shift + CH- /
 Green/↓	 APP REPEAT Green / APP / Repeat



