


 


 


 


 


 
 
 
 
 
 













 


 







 

 
 
 

 
 

 








 








Original	Replacement	Original	Replacement
 Power	 Power	 i	 DISPLAY INFO Info
 Source	 TIMER AV AV	 P+	 + CH Ch +
 1	 1	 P-	 - CH Ch -
 2	 2	 MENU	 TOP MENU MENU Menu
 3	 3	 Q. MENU	 E-MANUAL D.MENU D. Menu
 4	 4	 ▲	 ▲ Up
 5	 5	 ◀	 ◀ Left
 6	 6	 OK	 OK Ok
 7	 7	 ▶	 ▶ Right
 8	 8	 ▼	 ▼ Down
 9	 9	 BACK	 RETURN BACK Back
 0	 0	 EXIT	 CLEAR EXIT Exit
 TV	 SEARCH TV/R TV/R	 🌐	 HOME SMART Smart
 Recall	 FAV PRE-CH Pre Ch	 🎵	 APP MEDIA Media
 V +	 + VOL Vol +	 📺	 - / - GUIDE Guide
 V -	 - VOL Vol -	 ★/O	 SHIFT + 1 Shift + 1
 Mute	 MUTE Mute	 ★/Q	 SHIFT + 2 Shift + 2





Original		Replacement		Original		Replacement	
	[≡]/Text		Text				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Lang		Dual				
	Dialog		Subt				
	-[O]-		Options				
	<<		<<				
	Pause		Pause				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

