












 





 

















 








































Original	Replacement	Original	Replacement
On/Off	 Power	Auto/Track	 D.Menu / Top
Audio Out	 Mute / Dimmer	T.Set/Clock	 Setup / OPT /
Play	 Play / Slow	Video/Go-To	 Text / Goto
Pause	 Pause / Step / Freeze	Input Source	 AV / Input / RDS
Stop	 Stop / Hold	Menu	 Menu / Home
Record	 Rec / Rec Mode	Menu Up	 Up
Rewind	 << / Tune-	Menu Left	 Left
F.Forward	 >> / Tune+	OK Enter	 OK
Prev.	 I<< / Preset-	Menu Right	 Right
Next	 >>I / Preset+	Exit	 Exit / Cancel / Clear
F.Adv	 Sound / Title	Menu Down	 Down
Audio	 Audio / Lang I/II	Slow/Dpss+	 Vol+
Case Tape	 Eject / Surround	VCR/TV	 Smart / List
Mon/TV	 Picture / Format	Tracking+	 CH+ / Page+
Sp/Lp/Speed	 Zoom / Size	Slow/Dpss-	 Vol-
Timer/Sleep	 Sleep / Timer	Display	 Display / Media
Progr/C/CH	 TV/Radio /	Tracking-	 CH- / Page-































 


 

Original	Replacement	Original	Replacement
1	 1		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
-/--	 Guide / EPG / -/--		
0	 0		
Ch.Memo	 Fav / Marker / PC		
Repeat	 Green / APP / Repeat		
Slow Down	 +  Shift + Play /		
Clear 00:00	 +  Shift + Exit / Cancel / Clear		
Index Pict+	 +  Shift + CH+ /		
Index Pict-	 +  Shift + CH- /		

Page-



Original	Replacement	Original	Replacement
On/Off	 Power	Progr/C/CH	 TV/Radio /
Audio Out	 Mute / Dimmer	Auto/Track	 D.Menu / Top
Play	 Play / Slow	T.Set/Clock	 Setup / OPT /
Pause	 Pause / Step / Freeze	Video/Go-To	 Text / Goto
Stop	 Stop / Hold	Input Source	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Show View	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Audio Dub	 Sound / Title	Menu Right	 Right
Audio	 Audio / Lang I/II	Exit	 Exit / Cancel / Clear
Rec/Mode	 Subtitle / EQ	Menu Down	 Down
Eject/Reverse	 Eject / Surround	F.Adv	 Back / Return
Mon/TV	 Picture / Format	Slow/Dpss+	 Vol+
Sp/Lp/Speed	 Zoom / Size	VCR/TV	 Smart / List
Timer/Record	 Sleep / Timer	Chan+	 CH+ / Page+



Original	Replacement	Original	Replacement
Slow/Dpss-	 Vol-	Counter Stop	 Yellow / YouTube / Repeat
Display	 Display / Media	Counter Reset	 Blue / Prime Video / Random
Chan-	 CH- / Page-	Slow Down	 Shift + Play /
1	 1	Rec. On/Off	 Shift + Rec / Rec Mode
2	 2	X2 Rew/Play	 Shift + << /
3	 3	Frame Down	 Shift + I<< / Preset-
4	 4	Frame Up	 Shift + >>I / Preset+
5	 5	Index Pict+	 Shift + Up
6	 6	Set-	 Shift + Left
7	 7	Set+	 Shift + Right
8	 8	Index Pict-	 Shift + Down
9	 9	Otr/A.Otr	 Shift + Smart / List
-/--	 Guide / EPG / -/--	Tracking+	 Shift + CH+ /
0	 0	Vps/Pdc	 Shift + Display / Media
Ch.Memo	 Fav / Marker / PC	Tracking-	 Shift + CH- /
Counter Clock	 Red / Netflix / Search	Search Index	 Shift + Red / Netflix /
Count Remain	 Green / APP / Repeat		

