 







 

 





 

 



 



 







 









 



 







 









 







 





Original	Replacement	Original	Replacement
 Standby / On	 Power	 0	 0
 Input Select	 AV / Input / RDS	 Clear	 Exit / Cancel / Clear
 HDMI	 Shift + 0	 [i+]	 Info / Angle
 Eject	 Eject / Surround	 Text	 Text / Goto
 1	 1	 Audio	 Audio / Lang I/II
 2	 2	 Subtitle	 Subtitle / EQ
 3	 3	 Guide	 Guide / EPG / -/-
 Prog +	 CH+ / Page+	 Top Menu	 D.Menu / Top
 4	 4	 Up	 Up
 5	 5	 Menu / List	 Menu / Home
 6	 6	 Left	 Left
 Prog -	 CH- / Page-	 Enter / OK	 OK
 7	 7	 Right	 Right
 8	 8	 Display	 Display / Media
 9	 9	 Down	 Down
 Time Shift	 Zoom / Size	 Return / Back	 Back / Return
 Sat Link	 TV/Radio /	 Red	 Red / Netflix / Search





Original	Replacement
 Green	 Green / APP / Repeat
 Yellow / System	 Yellow / YouTube / Repeat
 Blue / Search	 Shift + Blue / Prime Video / Random
 Blue / Search	 Blue / Prime Video / Random
 << REV	 << / Tune-
 Play	 Play / Slow
 >> FWD	 >> / Tune+
 I<< Skip	 I<< / Preset-
 Stop	 Stop / Hold
 Skip >>I	 >>I / Preset+
 Pause	 Pause / Step / Freeze
 VCR	 Shift + 4
 DVD	 Shift + 2
 CM Skip	 Sound / Title
 Dubbing	 Picture / Format
 Rec	 Rec / Rec Mode
 Rec Speed	 Shift + Rec / Rec Mode

Original	Replacement
 Setup	 Setup / OPT /
 Timer Set	 Sleep / Timer
 Timer Prog	 Shift + Sleep / Timer
 1.3x / 0.8x Play	 Smart / List

