 









 










 













 


 


 

















 



 







Original	Replacement	Original	Replacement
 Power	 Power	 EPG	 Guide / EPG / -/--
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 SAT	 Shift + 0
 6	 6	 FAV	 Fav / Marker / PC
 7	 7	 Tv/Radio	 TV/Radio /
 8	 8	 Subtitle	 Subtitle / EQ
 9	 9	 Find	 Smart / List
 0	 0	 Pg Up	 CH+ / Page+
 Audio	 Audio / Lang I/II	 PgDn	 CH- / Page-
 Recall	 Back / Return	 Red	 Red / Netflix / Search
 Menu	 Menu / Home	 Green	 Green / APP / Repeat
 Exit	 Exit / Cancel / Clear	 Yellow	 Yellow / YouTube / Repeat
 Info	 Info / Angle	 Blue	 Blue / Prime Video / Random





Original	Replacement	Original	Replacement
	<<		<< / Tune-
	>>		>> / Tune+
	<		<< / Preset-
	>		>> / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Text		Text / Goto

