






 






 





 


 

 
 

 








 
 





| Original | Replacement | Original | Replacement |
|---|---|---|---|
|  Power |  Power |  Vol+ |  Vol+ |
|  TV/RAD |  TV/Radio / |  Mute |  Mute / Dimmer |
|  Input |  AV / Input / RDS |  PR+/Page Up |  CH+ / Page+ |
|  AV Mode |  Picture / Format |  Vol- |  Vol- |
|  Energy Saving |  Eject / Surround |  PR-/Page Down |  CH- / Page- |
|  1 |  1 |  Up |  Up |
|  2 |  2 |  Left |  Left |
|  3 |  3 |  OK |  OK |
|  4 |  4 |  Right |  Right |
|  5 |  5 |  Menu |  Menu / Home |
|  6 |  6 |  Down |  Down |
|  7 |  7 |  Return |  Back / Return |
|  8 |  8 |  Red |  Red / Netflix / Search |
|  9 |  9 |  Green/Stop |  Green / APP / Repeat |
|  List |  Smart / List |  Green/Stop |  Stop / Hold |
|  0 |  0 |  Yellow/Play |  Yellow / YouTube / Repeat |
|  Q.View |  Display / Media |  Yellow/Play |  Play / Slow |

| Original | Replacement | Original | Replacement |
|---|---|---|---|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





| Original | Replacement |
|--|---|
|  Blue/Pause |  Blue / Prime Video / Random |
|  Blue/Pause |  Pause / Step / Freeze |
|  Text/[≡] |  Text / Goto |
|  T.OPT/<<< |  I<<< / Preset- |
|  T.OPT/<<< |  Setup / OPT / |
|  T.OPT/<<< |  <<< / Tune- |
|  Subtitle/>>> |  >>> / Preset+ |
|  Subtitle/>>> |  Subtitle / EQ |
|  Subtitle/>>> |  >>> / Tune+ |
|  Simplink |  Sleep / Timer |
|  Q.Menu |  D.Menu / Top |
|  Info |  Info / Angle |
|  Guide |  Guide / EPG / -/-- |
|  FAV/Mark |  Fav / Marker / PC |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

