










 































Original	Replacement
 Power	 Power
 Open/Close	 Eject / Surround
 Power Tv	 Shift + Power
 DVD	 Shift + 2
 HDD	 Shift + 7
 AV/INPUT	 AV / Input / RDS
 AV/INPUT Tv	 Shift + AV / Input / RDS
 1	 1
 2	 2
 3	 3
 PR/CH+ Tv	 Shift + CH+ /
 4	 4
 5	 5
 6	 6
 PR/CH- Tv	 Shift + CH- /
 7	 7
 8	 8

Original	Replacement
 9	 9
 Vol+ Tv	 Vol+
 Dubbing	 Setup / OPT /
 0	 0
 PIP	 Picture / Format
 Vol- Tv	 Vol-
 O)/Audio	 Audio / Lang I/II
 [...] / Subtitle	 Subtitle / EQ
 CHP.ADD	 Guide / EPG / -/-
 Rec	 Rec / Rec Mode
 Rec Mode	 Shift + Rec / Rec Mode
 Title	 Sound / Title
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Pause/Step	 Pause / Step / Freeze





Original	Replacement
 Play	 Play / Slow
 Stop	 Stop / Hold
 Home	 Menu / Home
 Up	 Up
 PR/CH+	 CH+ / Page+
 Menu/List	 Smart / List
 Left	 Left
 Enter	 OK
 Right	 Right
 Display	 Display / Media
 Down	 Down
 PR/CH-	 CH- / Page-
 Return	 Back / Return
 Timeshift	 Sleep / Timer
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 Clear	 Exit / Cancel / Clear

Original	Replacement
 Zoom	 Zoom / Size
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 Thumbnail	 D.Menu / Top
 TV/DVD	 TV/Radio /
 Showview	 Info / Angle

