


 


 
 

 
 

 

 


 

 



 
 

 
 

 






 

 


 









 

 
 



 













Original	Replacement
 Power	 Power
 Open / Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Back
 Red	 Red
 Green	 Green
 Yellow	 Yellow

Original	Replacement
 Blue	 Blue
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Mute	 Mute
 TXT	 Text
 Aspect	 Format
 Nicam	 Shift + 3D
 Display	 Info
 Sleep	 Sleep
 Up / PR +	 Up
 Up / PR +	 Ch +
 Down / PR -	 Down
 Down / PR -	 Ch -
 Right / Vol +	 Right
 Right / Vol +	 Vol +
 Left / Vol -	 Left
 Left / Vol -	 Vol -





Original	Replacement	Original	Replacement
	 Ok		 Shift + Down
	 AV		 >>I
	 Menu		 Shift + Right
	 Stop		 Shift + Left
	 Play		 <<
	 Pause		 >>
	 TV/R		 Options
	 D. Menu		 Dual
	 Shift + Subt		 Shift + Info
	 Media		 Shift + Eject
	 3D		 Subt
	 Smart		 Shift + Ok
	 Guide		
	 Shift + Up		
	 Pre Ch		
	 List		
	 I<<<		

