 

 

 

 

 

 

 

 

 

 

 

 













 

 
 


 
 
 

 

 

 









 

 




 






Original	Replacement	Original	Replacement
 Power	 Power	 9	 9
 AV	 AV / Input / RDS	 Info	 Info / Angle
 Mute	 Mute / Dimmer	 Back	 Back / Return
 16:9	 Picture / Format	 0	 0
 Zoom	 Zoom / Size	 Exit	 Exit / Cancel / Clear
 Subt.	 Subtitle / EQ	 Menu	 Menu / Home
 Audio	 Audio / Lang I/II	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 FAV	 Fav / Marker / PC	 Down	 Down
 4	 4	 Vol-	 Vol-
 5	 5	 Vol+	 Vol+
 6	 6	 PR-	 CH- / Page-
 EPG	 Guide / EPG / -/--	 PR+	 CH+ / Page+
 7	 7	 Red	 Red / Netflix / Search
 8	 8	 Green	 Green / APP / Repeat





Original	Replacement
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto
	Sound / Title
	Smart / List
	Sleep / Timer
	D.Menu / Top
	Setup / OPT /
	Shift + Zoom /
	Pause / Step / Freeze

Original	Replacement

