

 

 



 





 



 



 



 



 



 



 



 

 

 



 





Original		Replacement		Original		Replacement	
	Power		Power		i		Info / Angle
	CD		3		Cancel		Exit / Cancel / Clear
	Tuner		6		Sound Ctrl		Sound / Title
	Tape		5		Up		CH+ / Page+
	AUX		7		Down		CH- / Page-
	Display Eject		Guide / EPG / -/--		Mute		Mute / Dimmer
	Power Sound		TV/Radio /		Bass		Display / Media
	I<<		Green / APP / Repeat		Mode		Picture / Format
	>>I		>>I / Preset+		Treble		Text / Goto
	<I		Eject / Surround				
	I>/Pause		Yellow / YouTube / Repeat				
	PTY/Stop		Stop / Hold				
	CD Copy		Fav / Marker / PC				
	Rec		Rec / Rec Mode				
	Memory		Menu / Home				
	+		Up				
	-		Down				

