

 

 

 

 

 

 







 

 

 

 





 



 

 



 



 



















 




 

 



 







 









| Original  | Replacement      | Original  | Replacement           |
|---|------------------|---|-----------------------|
|      | Power            |      | Power                 |
|      | Sleep            |      | Sleep / Timer         |
|      | Mute             |      | Mute / Dimmer         |
|      | Mode             |      | AV / Input / RDS      |
|      | 1                |      | 1                     |
|      | 2                |      | 2                     |
|      | 3                |      | 3                     |
|      | Eject/Nicam2     |      | Eject / Surround      |
|      | Eject/Nicam2     |      | Sound / Title         |
|      | 4                |      | 4                     |
|     | 5                |     | 5                     |
|    | 6                |    | 6                     |
|    | TXT/MIX          |    | Text / Goto           |
|    | Play/Pause       |    | Play / Slow           |
|    | Play/Pause       |    | Pause / Step / Freeze |
|    | 7                |    | 7                     |
|    | 8                |    | 8                     |
|    | 9                |    | 9                     |
|    | Stop/Exit/Cancel |    | Exit / Cancel / Clear |
|    | Stop/Exit/Cancel |    | Stop / Hold           |
|    | -/--             |    | Guide / EPG / -/--    |
|    | 0                |    | 0                     |
|    | Back             |    | Back / Return         |
|    | SYS Menu         |    | Menu / Home           |
|    | Rec              |    | Rec / Rec Mode        |
|    | Up               |    | Up                    |
|    | CH+              |    | CH+ / Page+           |
|   | DTV/Radio        |   | TV/Radio /            |
|  | Left             |  | Left                  |
|  | Enter            |  | OK                    |
|  | Right            |  | Right                 |
|  | Vol-             |  | Vol-                  |
|  | Down             |  | Down                  |
|  | CH-              |  | CH- / Page-           |





| Original  | Replacement  |
|---|--|
|  Vol+            |  Vol+                         |
|  Return          |  Shift + Back / Return        |
|  Menu DVD        |  D.Menu / Top                 |
|  Setup           |  Setup / OPT /                |
|  Display         |  Display / Media              |
|  Search/FAV      |  Shift + Red / Netflix /      |
|  Search/FAV      |  Fav / Marker / PC            |
|  Slow/EPG        |  Shift + Play /               |
|  Slow/EPG        |  Shift + Guide / EPG / --     |
|  Language/Info   |  Audio / Lang I/II            |
|  Language/Info  |  Info / Angle                |
|  Zoom/List     |  Zoom / Size                |
|  Zoom/List     |  Smart / List               |
|  Red/Angle     |  Red / Netflix / Search     |
|  Red/Angle     |  Shift + Info / Angle       |
|  Green/Program |  Green / APP / Repeat       |
|  Green/Program |  Shift + TV/Radio / Program |

| Original  | Replacement   |
|---|---|
|  Yellow/Repeat   |  Shift + Green / APP /       |
|  Yellow/Repeat   |  Yellow / YouTube / Repeat   |
|  Blue/A-B        |  Blue / Prime Video / Random |
|  Blue/A-B        |  Shift + Yellow / YouTube /  |
|                  |  Shift + Stop /              |
|                  |  << / Tune-                  |
|                  |  >> / Tune+                  |
|                  |  I<< / Preset-               |
|                  |  Shift + Zoom /              |
|                  |  >> / Preset+                |
|                 |  Subtitle / EQ              |
|  Title/Subpage |  Shift + Sound / Title     |
|                |  Shift + Down              |
|                |  Shift + Up                |

