






 


 

 





 

 

 

















Original	Replacement	Original	Replacement
	Power		Up
	TV / SAT		Mode
	Pause		D.Menu / Top
	Sleep		Left
	1		OK
	2		Right
	3		Exit / Cancel / Clear
	4		Down
	5		TV/Radio /
	6		Color
	7		Picture / Format
	8		Info / Angle
	9		Shift + Info / Angle
	RCL		Mute / Dimmer
	0		Audio / Lang I/II
	EPG		Subtitle / EQ
	Menu		Red / Netflix / Search
			Green / APP / Repeat
			Yellow / YouTube / Repeat



