



Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 Vol+	 Vol +
 5	 5	 Vol-	 Vol -
 6	 6	 P+	 Ch +
 7	 7	 P-	 Ch -
 8	 8	 Mute	 Mute
 9	 9	 i	 Info
 0	 0	 EXIT	 Exit
 ↔	 PRE-CH	 Source	 AV
 BACK	 BACK	 Q.MENU	 D. Menu
 MENU	 MENU	 EPG	 Guide
 Netflix	 MEDIA	 TXT	 Text
 Internet	 SMART	 *	 Format
 OK	 OK	 */Q	 3D





Original		Replacement		Original		Replacement	
	[>]		Options				
	Lang		Dual				
	Subt.		Subt				
	[+]		Shift + Format				
	TV		TV/R				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Rec		Rec				
	Play		Play				
	Stop		Stop				
	Pause		Pause				
	<<		<<				
	>>		>>				

