

 





Original		Replacement		Original		Replacement	
	Power		Power		8		8
	Mute		Mute		9		9
	Info		Info		0		0
	Dual I/II		Dual		AVC		Media
	TV		TV/R		Vol +		Vol +
	Sleep		Sleep		Vol -		Vol -
	Sound		Shift + Dual		Prog +		Ch +
	Picture		Format		Prog -		Ch -
	Freeze		Pause		Up		Up
	Wide		Eject		Left		Left
	1		1		Enter		Ok
	2		2		Right		Right
	3		3		Down		Down
	4		4		Input		AV
	5		5		Menu		Menu
	6		6		Hold		Stop
	7		7		Recall		Back





Original	Replacement	Original	Replacement
 [≡◇]	 Pre Ch		
 Timer	 Shift + AV		
 Mix	 Text		
 Index	 Shift + Info		
 Subtitle	 Subt		
 Reveal	 Play		
 Size	 Shift + Eject		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

