




Original	Replacement
	 Mute / Dimmer
	 TV/Radio /
	 Power
	 Picture / Format
	 Pause / Step / Freeze
	 Audio / Lang I/II
	 Back / Return
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Info / Angle

Original	Replacement
	 0
	 Shift + 0
	 AV / Input / RDS
	 Menu / Home
	 Up
	 CH+ / Page+
	 Exit / Cancel / Clear
	 Left
	 Vol-
	 OK
	 Vol+
	 Right
	 Down
	 CH- / Page-
	 Shift + CH- /
	 I<< / Preset-
	 >>I / Preset+





Original	Replacement
	+ Shift + CH+ /
	Fav / Marker / PC
	Guide / EPG / -/--
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto

Original	Replacement

