






 

 

 




 
 


 




 

 

 








Original	Replacement
 Power	 Power
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Guide	 Guide
 CH List	 List
 Red	 Red
 Green	 Green
 Yellow	 Yellow

Original	Replacement
 Blue	 Blue
 [≡]	 Menu
 Play	 Play
 Pause	 Pause
 Back	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Home	 Smart
 CH+	 Ch +
 CH-	 Ch -





Original	Replacement	Original	Replacement
Subtitle	Subt		
Info	Info		
TXT	Text		
Music	3D		
Free	Options		
ART	Dual		
Netflix	Shift + Media		
Prime Video	Format		
YouTube	Shift + Smart		
Rakuten TV	TV/R		
Media	Media		
[++]	D. Menu		

Original	Replacement	Original	Replacement

