















 



 



 

 











 




 




Original	Replacement
	 Power
	 AV / Input / RDS
	 Fav / Marker / PC
	 Shift + Yellow / YouTube /
	 Shift + Blue / Prime
	 Shift + Green / APP /
	 D.Menu / Top
	 Picture / Format
	 Zoom / Size
	 Info / Angle
	 Setup / OPT /
	 Shift + Red / Netflix /
	 TV/Radio /
	 Sound / Title
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat

Original	Replacement
	 Blue / Prime Video / Random
	 Menu / Home
	 Up
	 Play / Slow
	 Left
	 OK
	 Right
	 Back / Return
	 Down
	 Exit / Cancel / Clear
	 Vol+
	 Shift + Menu /
	 CH+ / Page+
	 Vol-
	 Display / Media
	 CH- / Page-
	 Subtitle / EQ



