






 

 


 




 
 


 

 





 
 
 



 

 

 


 


 

 


 


 
 
 


 
 

 

 








Original	Replacement	Original	Replacement
 Power	 Power	 Down / P -	 Ch -
 Mute	 Mute	 Right / Vol +	 Right
 TV	 Smart	 Right / Vol +	 Vol +
 Text / Mix	 Text	 Left / Vol -	 Left
 1	 1	 Left / Vol -	 Vol -
 2	 2	 Red	 Red
 3	 3	 Green / Picture	 Green
 4	 4	 Yellow / Tuning	 Yellow
 5	 5	 Blue / Features	 Blue
 6	 6	 Expand	 3D
 7	 7	 Reveal	 Media
 8	 8	 Norm / Hold	 Pause
 9	 9	 Recall / Index	 Info
 0	 0	 Recall / Index	 Pre Ch
 Up / P +	 Up	 Subpage	 Subt
 Up / P +	 Ch +	 Update	 Options
 Down / P -	 Down	 I / II	 Dual





Original		Replacement		Original		Replacement	
AV	AV	TIMER AV	AV				

