





 

 





 





 











 







 

 



 




 




Original	Replacement	Original	Replacement
 Video	 4	 Position	 Sound / Title
 RGB	 Setup / OPT /	 Menu	 Menu / Home
 Search	 Red / Netflix / Search	 Left	 Left
 Power	 Power	 Up	 Up
 Aspect	 Picture / Format	 Enter	 OK
 Auto	 Sleep / Timer	 Right	 Right
 Blank	 D.Menu / Top	 Esc	 Exit / Cancel / Clear
 Magnify On	 Shift + CH+ /	 Down	 Down
 Home	 Shift + Menu /	 Reset	 AV / Input / RDS
 Page Up	 CH+ / Page+		
 Volume	 Vol+		
 Magnify Off	 Shift + CH- /		
 End	 Back / Return		
 Page Down	 CH- / Page-		
 Mute	 Mute / Dimmer		
 Freeze	 Pause / Step / Freeze		
 Keystone	 Subtitle / EQ		

