 



 

 

 

 

 

 

 

 

 



 





 
 
















 

 


 











Original	Replacement	Original	Replacement
 PWR	 Power	 TV/Rad	 TV/Radio /
 TV/STB	 Display / Media	 1	 1
 2	 2	 3	 3
 4	 4	 5	 5
 6	 6	 7	 7
 8	 8	 9	 9
 Back	 Back / Return	 0	 0
 Mute	 Mute / Dimmer	 Red	 Red / Netflix / Search
 OPT	 Setup / OPT /		

Original	Replacement	Original	Replacement
 Green	 Green / APP / Repeat	 A/V+	 AV / Input / RDS
 Yellow / FAV	 Yellow / YouTube / Repeat	 FAV	 Fav / Marker / PC
 Blue / A-Z	 Blue / Prime Video / Random	 Blue / A-Z	 Shift + Blue / Prime
 Menu	 Menu / Home	 EPG	 Guide / EPG / -/-
 Info	 Info / Angle	 Up	 Up
 Left	 Left	 OK	 OK
 Right	 Right	 Down	 Down
 Vol+	 Vol+	 Exit	 Exit / Cancel / Clear
 PR/CH+	 CH+ / Page+		





Original	Replacement
	Vol-
	CH- / Page-
	Pause / Step / Freeze
	Play / Slow
	<< / Tune-
	Stop / Hold
	>> / Tune+
	Rec / Rec Mode
	Shift + Play /
	Smart / List
	Shift + Yellow / YouTube /
	Shift + Fav / Marker / PC
	Text / Goto
	Shift + OK
	Shift + Left
	Shift + Right
	Sleep / Timer

Original	Replacement

